


Remote Control SM-50R

Auto learn 3 pushbuttons - Multifrequency

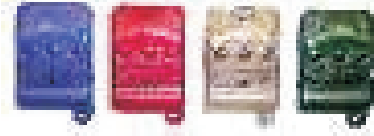

Copy a code from another remote control

To copy a code into SM-50R from another remote control of same type we follow procedure as described below:

- 1. Press and hold down simultaneously **all 3 buttons** until the LED lights continuously (**Sm50R is ready for programming**).*
- 2. Release all buttons.*
- 3. Place the front side of the remote control that we want to copy, opposite the front side of Sm50R, 4cm apart.*
- 4. Pressing and holding down the button of the remote control that we want to copy, we press and hold down the button Sm50R that we want to program.*
- 5. When the Remote Control is copied, the **LED** of **SM-50R** flashes.*
- 6. Release all buttons. SM-50R has been programmed.*
- 7. If we fail to perform one of the above steps, then we have to repeat the whole procedure.*