 


Electronic Safe Lock SL 523 / SL 525

Quick Reference Guide

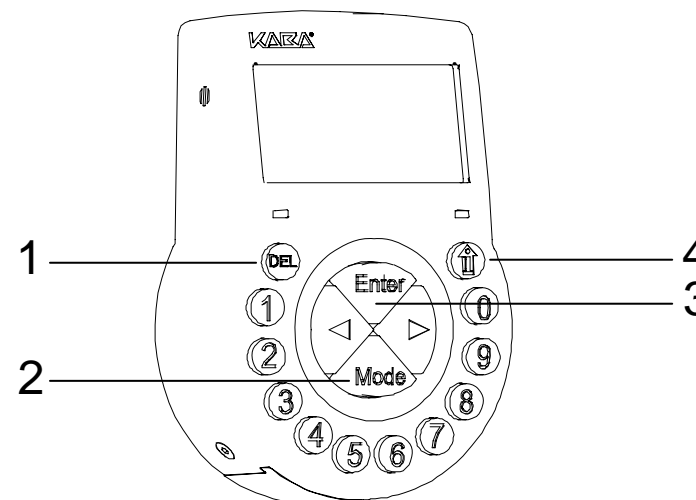 


- 1 DEL delete
- 2 MODE access to programming mode
- 3 ENTER confirm entry
- 4 INF/ESC lock informations / one menu level up

Document
Edition:

KSW3s525.0002 / en 2007.07
July 2007

Codes

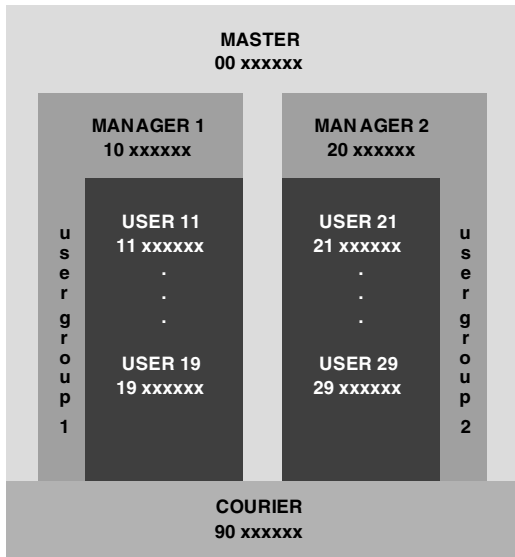


Duress code

Precondition for duress code recognition is that this function has been activated. To enter a duress code, the value 1 has to be added or deducted to the last or to the first digit of the code, depending on the code format setting.


Code format ID/PIN or PIN/ID

By pressing the INF/ESC button, the code format is displayed: ID/PIN (=ID followed by PIN) or PIN/ID (=PIN followed by ID)

Lock opening

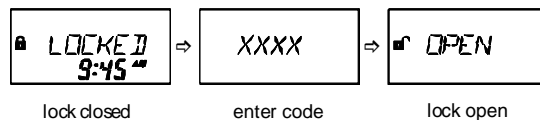

Access to programming mode

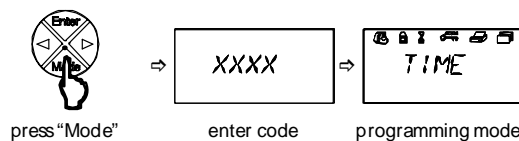

Status messages



 
Locked: the lock is mechanically closed. The current time is displayed. The lock may be opened by entering a valid code.




Open: the lock is mechanically open. The boltwork or the safe door can be opened during a time window of 6 seconds.




Weekly time lock: the lock is in a weekly time lock period or in an immediate time lock period and cannot be opened. The current time is displayed.



 Holiday time lock: the lock is in a holiday time lock period and cannot be opened. The current time is displayed.



 
Time delay: after entering a valid code to open the lock the programmed time delay starts counting down.




Confirmation after elapse of time delay: once the time delay has elapsed, within a programmed time window the same code must be entered again as confirmation.



 
Dual mode: if dual mode is activated, two codes must be entered to open the lock. The second code is requested with this message.



 Penalty after wrong trials: a penalty time of 5 minutes is initiated after the fourth consecutive false code has been entered.



 Remote disabling: opening of the lock can be disabled by a remote signal. While Remote Disabling is active this message is shown while the lock is closed.



Identification with denied code: codes can be denied with a superior code, i.e. declared as invalid until possible further re-permission. Entering a denied code causes this message.



Battery compartment has been opened: this message is shown if the battery compartment, which also serves as a dismantling protection for the input unit, has been opened.